

2510/2750/2850 Series

Installation Operation Maintenance Manual

**Simplex Softener
With 2510/2750/2850 Series
Downflow Brining Valve
20-500 litres Resin**

Models:

Mechanical Meter/Timer

SXT Electronic Meter/Timer

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

CONTENTS

NOS.		PAGE
1.0	GENERAL NOTES	5
2.0	THE SOFTENING PROCESS	6
2.1	In Service	6
2.2	Regeneration	6
2.3	The Regeneration Process	7
2.4	Meter Control of Regeneration Initiation	7
3.0	UNPACKING AND PARTS IDENTIFICATION	8
3.1	Basic Packages	8
3.2	Unpacking Notes	8
3.3	Missing or Damaged Goods	8
4.0	TEMPORARY STORAGE	8
5.0	DESCRIPTION OF PLANT COMPONENTS	9
5.1	Softener Vessel and Internals	9
5.2	Control Valve	9
5.3	Regeneration Controller and Transformer	9
5.4	Brine System	10
6.0	PRE-INSTALLATION CHECKS	11
6.1	Mechanical	11
6.1.1	Foundations/Drainage	11
6.1.2	Operating Space	11
6.1.3	Incoming Water	11
6.1.4	Pipework	12
6.1.5	Water Supply Company Requirements	12
6.2	Electrical	13

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

NOS.		PAGE
7.0	ASSEMBLY/INSTALLATION	14
7.1	Mechanical	14
7.1.1	Assembling Vessel, Riser Tube and Internals	14
7.1.2	Charging the Resin	14
7.1.4	Assembling the Control Valve	15
7.1.5	Attaching the Control Valve	15
7.1.6	Brine System	15
7.1.7	Pipework	15
7.1.8	Storage tank ball valve	16
7.1.9	Drains and Overflow Connections	16
7.2	Electrical	17
7.2.1	Mains Supply	17
7.2.2	Transformer	17
8.0	COMMISSIONING	18
8.1	Introduction	18
8.2	Controller Setting	18
8.2.1	Setting the Time of Day	18
8.2.2	Site Program – Setting the Capacity	18
8.3	Brine System	19
8.3.1	Brine Tank Filling	19
8.4	Pre Service Flush and Regeneration (MI)	20
8.5	Pre Service Flush and Regeneration (SXT)	22

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

NOS.		PAGE
9.0	OPERATION	23
9.1	Normal Operation	23
9.2	Refilling with Salt	23
9.3	Manual Regeneration	23
9.4	By-passing the Softener	23
9.5	Temporary Shut-down	24
9.6	Changes in Incoming Water	24
9.7	Routine Monitoring	25
10.0	FAULT FINDING AND RECTIFICATION	26
10.1	No Flow to Service	26
10.2	Poor Treated Water Quality	26
10.3	No Regeneration	27
10.4	Unsatisfactory Capacity between Regeneration's	27
11.0	WARRANTY AND SERVICE	28
11.1	After Sale Warranty	28
12.0	TECHNICAL DATA	29
12.1	Process and Operating	29
12.2	Engineering Data	34
13.0	FACTORY PROGRAMMING	
13.1	Regeneration Settings	35
13.2	Softener Outputs & Capacity	37
13.3	Master Programming Set up for SXT Valves	38
15.0	CE CERTIFICATE	41

APPENDIX II

Valve manufacturer's manual including parts lists and exploded diagrams

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

1.0 GENERAL NOTES

These instructions cover the 2510/2750/2850 range of Simplex Water Softeners, which includes models ranging in size from 20-500 litres resin volume fitted with time clock or metered, mechanical or digital SXT controllers.

It is recommended that these instructions are read throughout before commencing any work on the unit, particularly if you have no previous experience of installing and using a water softener.

The installation of a softener is very straightforward, and the only adjustments to be made to the controller program are to the capacity or number of days between regeneration, depending on if the valve is a time clock or metered version. This is detailed in section 8.

This softener will require salt for regeneration. We recommend the used of proprietary 'pellet' or 'tablet' salt.

Drinking softened water has not been shown to be harmful to normal healthy children and adults, but softened water contains a higher level of Sodium than a hard town mains supply. This is of concern to individuals on low Sodium diets or for babies fed with powder formula milk that already contains Sodium. It is therefore recommended that a separate un-softened drinking water supply is left in place or installed on a drinking water faucet. If a cartridge type water filter is installed on the drinking water line, this must be fed with un-softened water.

We have also supplied with the system the original valve manufacturer's handbook. This is written principally for American customers and has a number of small differences in the setting up instructions from those used in Europe. In the event of confusion, refer to the data in this manual rather than in the valve manufacturer's handbook!

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

2.0 THE SOFTENING PROCESS

Hardness in water is caused by the presence of dissolved salts of Calcium and Magnesium. In order to overcome the problems associated with the use of hard water, these salts must be removed. This process is called 'Softening'. One means of removing the salts is to exchange them for soluble Sodium salts. This technique is known as 'Ion Exchange Softening'.

2.1 IN SERVICE

In order to soften the water, it is passed through a bed of Ion Exchange resin beads which are contained inside a vertical cylindrical vessel. These beads are made of a synthetic material, and are usually amber or dark brown in colour and between 0.5 and 1.0 mm in diameter.

As the water flows down through the resin, the Calcium and Magnesium in the hard water are progressively exchanged for Sodium, with the result that the water which flows out of the unit contains only Sodium salts, which are not scale-forming. The Calcium and Magnesium remain, attached to the resin.

The Ion Exchange resin does not have an unlimited capacity for exchanging Calcium and Magnesium, so to keep the exit water soft it is necessary to periodically 'Regenerate' the resin to restore its capacity to soften the water.

2.2 REGENERATION

The softening process can be reversed if a strong solution of Sodium Chloride (i.e. Common salt dissolved in water -'brine') is passed through the resin.

The high concentration of Sodium allows it to exchange for the Calcium and Magnesium held on the resin, and these are then carried away to drain. The resin is left full of Sodium to enable it to soften water again.

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

2.3 THE REGENERATION PROCESS

The regeneration process consists of four stages:-

Backwash - Water flows upwards through the resin bed, and out to a drain. As it does so, it loosens the ion exchange beads, removes any resin 'fines' (i.e. small pieces of broken beads etc.) and cleans off any particles of dirt or pipework corrosion products which may have accumulated during the service cycle.

Brine injection/Displacement Rinse - During the first part of this stage, the concentrated salt -solution is drawn from the salt storage tank, blended with water to reduce the concentration to the correct level, and passed down through the resin. When the required quantity of brine has been drawn in, the water flows alone to push the remaining brine through the resin at the correct rate, and ensure that all the resin sees the right amount of regenerant.

Fast Rinse - This follows the brine injection and displacement rinse stage, and entails rinsing away the residual brine and Calcium and Magnesium salts from the resin and re-packing the resin bed down. This is done down with water flowing through the resin in the direction of service.

Salt Tank Refill - Following the fast rinse, a quantity of water sufficient to dissolve the correct amount of salt for the next regeneration is returned to the salt tank. When this has finished, the unit automatically returns to service.

2.4 TIMER OR METER CONTROL OF REGENERATION INITIATION

There are basically two methods for determining when the softener is to be regenerated. With a time clock valve, at a pre-set time of day (usually 2 am) every day or less frequently as appropriate, the clock signals for a regeneration and the regeneration controller takes over.

Alternatively, a water meter is installed in the outlet from the softener, to measure the volume of water which passes to service. This meter drives a turbine, the movement of which is measured by a magnetic sensor which sends signals to the regeneration controller. The controller microprocessor uses this information to calculate when the unit should be regenerated.

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

3.0 UNPACKING AND PARTS IDENTIFICATION

3.1 BASIC PACKAGES

The softener will be delivered in a number of packages which include a glass fibre reinforced pressure vessel, a control valve, a brine tank, and a number of 25 litre bags, or part bags of resin and a funnel to fill the vessels.

3.2 UNPACKING NOTES

The unpacking of the softener is quite straightforward, and there are no 'hidden' items. It is advisable to keep the packages sealed until such time as they are used, to prevent dust or water entry.

Care should be taken in lifting the softener or its parts out of their cartons. It is advisable to lay large cartons on their side and slide out the softener or parts prior to standing them up.

3.3 MISSING OR DAMAGED GOODS

Immediately on receipt of the goods, it is advisable to check that all items ordered have been received. If you have any doubt that goods have been supplied as requested, please contact your supplier immediately. If any items are missing or damaged, the carrier and your supplier must be notified in writing within 3 days of receipt if a claim is to be made.

4.0 TEMPORARY STORAGE

If installation is not to start immediately after delivery, the equipment should be stored in a clean dry area, where it will not be damaged, or be subjected to temperatures below freezing.

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

5.0 DESCRIPTION OF PLANT COMPONENTS

5.1 SOFTENER VESSEL AND INTERNALS

The pressure vessel which contains the ion exchange resin is made from a fibreglass/epoxy resin outer layer surrounding an inner, seamless shell made from Polyethylene, Polypropylene or ABS. Vessels for the 2510 and 2750 will terminate with a 2.5 inch nominal diameter top hole, or be supplied with a 4" to 2.5" adapter. Vessels for the 2850 will have a 4" top hole vessel.

All vessels are equipped with a distribution system. This is attached to a central riser tube, which is connected to the control valve, and passes water into and out of the resin bed. On smaller systems this will have a single distributor fitted to the riser. On larger and high flow systems there will be multiple distributors built up as a 'hub and laterals' on the bottom of the riser tube.

5.2 CONTROL VALVE

The valve is mounted on top of the vessel, and directs the water flow in and out of the resin bed during the service and regeneration cycles.

The valve carries out its various functions by moving pistons backwards and forwards in a series of seals and spacers contained within the body casting. The movement of these pistons is controlled by a rotating cam, which is driven from the controller. Further cams in the controller direct the movement of the valve controlling the brine system.

5.3 REGENERATION CONTROLLER AND TRANSFORMER

The regeneration controller is attached to the valve, and is contained in a plastic housing.

The controller is powered by 24v AC electricity, and a separate, wall mounted transformer is connected to the valve to reduce normal mains voltage down from 240v so that all the electrical supply in and around the control valve runs at a safe 24v.

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

5.4 BRINE SYSTEM

The brine system consists of a moulded polyethylene tank into which the brine well and brine pick up are assembled. The tank forms the salt storage container.

The brine pick-up tube within the brine well is connected to the pipe from the control valve which sucks the brine from the tank. At the bottom of the brine pick-up tube is an air check valve. This serves to prevent air entering the valve when all the brine has been drawn in. Air in the system could cause spurting and 'hammering' at the taps or outlets.

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

6.0 PRE-INSTALLATION

6.1 MECHANICAL

6.1.1 Foundation/Drainage

The softener will not require any special foundations, provided that a firm, level area which is capable of supporting the working weight is available. (See Engineering Data, Section 12.2)

Unwanted water from the regeneration process must flow to drain, and so an open drain or gully, capable of passing the necessary flow is required (see Process and Operating Data, 12.1, for relevant flows). The total flow of water to drain depends on site conditions, but will be approximately 6 times the resin volume. The drain may be at a level no higher than 500mm above the softener valve.

A second drain is required for the brine tank overflow. This is a safety drain which will only discharge water if there is a malfunction in the control valve. Where possible this should be installed through an outside wall like a cistern overflow, where it will give a visual indication of any failure.

6.1.2 Operating Space

The space occupied by the softener can be found in the Engineering Data (Section 12.2),.

Access will be required to refill the brine tank, and to carry out adjustments or maintenance on the equipment. It is therefore recommended that a minimum of 500mm clearance be allowed in front of the unit for this purpose.

6.1.3 Incoming Water

The raw water to be fed to the softener must comply with the following:-

1. Available at all times at a flow equal to the required service flow or greater, and
2. At a pressure between 1.7 and 5.5 bar
3. Temperature between 0 and 50°C
4. Suspended solids less than 1 ppm
5. Iron less than 0.2 ppm, Manganese less than 0.1 ppm, Free Chlorine less than 1 ppm if temperature is less than 15°C, less than 0.3 ppm if temperature higher (up to 30°C)

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

6.1.4 Pipework

Pipework to be connected to the softener should not have an excessive amount of hardness scale deposit. Piping that is heavily built up with scale (or Iron deposits) should be replaced.

Make sure that the pipework can be connected to the softener in such a way as to impose no stresses on the control valve, and that it is properly aligned and supported.

A system for the complete by-passing and isolation of the softener should be installed (see Section 7.1.6).

6.1.5 Water Supply Company Requirements

It is essential that if the equipment is to be connected directly to a mains water supply, the local bylaws must be adhered to. These cover both plumbing and the prevention of backflow into the mains. If there is any doubt, the local water inspector should be consulted, but in general, the installation of a 'Double check valve assembly' conforming to BS6282 part 2 will be required in the feed pipework to the softener.

If the pressure available from the mains is not adequate it will be necessary to install a booster pump arrangement. Such a system would be covered by additional bylaws, and the water storage tank needed must comply with these.

6.2 ELECTRICAL

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

A continuous supply of 24v, 5 VA is required by the softener. A 240v transformer with an output of 9.6 VA is provided, which should be connected to an uninterrupted mains supply, which is separately 1 Amp fused, and does not have any additional switch.

It is recommended that the transformer be attached to a nearby wall, within 500 mm of the softener in an area free from water spray or excessive heat or condensation.

A plug is not provided with this softener since the cable should be connected to fused spur outlet. However if that is not possible then a plug should be fitted to the cable with a 1 amp fuse. The socket used should be un-switched to prevent the softener from being inadvertently turned off.

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

7.0 ASSEMBLY/INSTALLATION

7.1 MECHANICAL

Check all the items against the parts list and shipping documents, and ensure you have them all before starting work. In addition to the softener you will require installation materials and basic tools, (i.e., spanners, screwdrivers etc., and PTFE tape)

7.1.1 Assembling Vessel, Riser Tube and Internals

The larger units are shipped as pre-assembled components to reduce the risk of transit damage. These need to be assembled on site. Open the cartons containing the pressure vessels and remove them. Check that the vessels have not been damaged in transit. Pay particular attention to the vessel's top hole threads, as this is where the valve will seal. Check that there is no dirt or swarf inside.

Riser Tube/Bottom Filter

This comprises a length of pipe (the 'riser tube') to one end of which is bonded a moulded screen or hub and lateral. The other end is fitted into the bottom of the control valve. To make sure the riser fits properly, and there is no leakage, it will be supplied to the correct length prior to despatch.

7.1.2 Charging the Resin

The ion exchange resin is supplied in 25 litre bags and/or part bags if applicable. All models will be supplied with exactly the right quantity of resin. It is important that only the correct volume of resin is put into each vessel or the system will not function properly. (See **Section 12.1.2** for data)

Place the vessel in its final location - once filled with resin and water they should not be moved. Fill the vessel about 1/5 –1/3 full with clean water. A cover is provided to be slipped over the end of the riser when filling with resin. This must be carefully removed without disturbing the riser prior to fitting the control valve. Carefully open the resin bags and pour the resin into the vessel, using a funnel, keeping the riser tube central and upright. Take great care not to spill resin on the floor. If any is spilt, make sure it is swept up immediately, as it is very easy to slip on it. Wash away any loose resin from the threads of the vessel or adapter collar. Remove the riser cover and check that the top of the riser is still correctly located

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

7.1.4 Assembling the Control Valve

Carefully remove the control valve from the packing, and check that all parts are present. Attach the top distributor to the valve.

7.1.5 Attaching the Control Valve

Carefully fit the valve on to the vessel, taking care to ensure that the riser tube locates correctly into the valve base through the top distributor, and that the threads are not crossed. Also take care to make sure that the 'O' rings are properly seated and not pinched.

7.1.6. Brine System

Move brine tank into position and connect the outer port of the bulk head union to the brine draw connection on the valve using the 3/8" or 1/2" tubing. Make sure that this connection is also tight to stop air leaking in.

If the brine draw tubing is adjusted for length during installation, ensure that brass tubing inserts are refitted into tubing end prior to connecting into brine tank and control valve.

7.1.7 Pipework

Pipework should be assembled incorporating the features shown in the Installation Diagram, Section 14.1. It is essential that inlet and outlet isolating valves and a by-pass valve are provided, and that the water main is protected by a double check valve where appropriate (see Local Water By-laws).

In domestic premises it is recommended that a hard water supply is still used for drinking water (see General Notes Section 1.0).

Pipework can be constructed from any normally acceptable material (Copper, Galvanised, Plastic), provided it is properly supported and aligned. Ensure that the pipe is sufficiently large to accommodate the flow of water required, making due allowance for the pressure drop between the softener and the point of discharge of soft water.

NOTE: IF BRAZED OR SOLDERED FITTINGS ARE TO BE USED, THE PIPEWORK MUST BE DISCONNECTED FROM THE VALVE DURING HEATING AND COOLING. EXCESS HEAT CAN CAUSE PERMANENT DAMAGE TO SOME OF THE VALVE COMPONENTS.

7.1.8 Storage tank ball valve

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

Conventional ball float valves pass water at a slow trickle into storage tanks and cisterns when they are shutting off. Trickle flow is not recommended for satisfactory functioning of a water softener since channelling can occur through the resin bed and the meter may not accurately monitor very low flows. It is therefore recommended that main storage tanks for softened water should have the ball valve replaced with a servo type valve such as a Torbeck, Fluidmaster or Aylesbury which permit full flow until they close off. These are inexpensive and are a direct replacement for the more common brass ball float valves.

7.1.9 Drains and overflow connections

Connect the overflow fitting on the brine tank to a suitable drain, using flexible or rigid tubing. Make sure that there is a clear gap of approximately 50 mm between the end of the tube and the top of the drain tundish or gully edge.

The drain connection from the valve is a 1/2" hose barb (2510/2750) or 1" BSPM (2850). Flexible tube should be run from this connection to a drain capable of taking the maximum flow in regeneration (see Section 12.1), and leaving a similar gap above the drain edge. The drain must not be at a higher level than the 500mm above the control valve and preferably should have an air break at the same height as the control valve.

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

7.2 ELECTRICAL

Electrical installation is very straightforward, but should still be carried out by a competent electrician, and must conform to the appropriate standards of safety.

7.2.1 Mains Supply

The mains supply should be through a separate, switched supply, fused and earthed in accordance with Institute of Electrical Engineers Regulations. Current rating should be 1 Amp.

7.2.2 Transformer

A safety transformer is provided to reduce the voltage to 24 Volts to operate the controls.

This should be attached to a convenient wall, within 500mm of the softener.
DO NOT SWITCH ON THE ELECTRICAL SUPPLY AT THIS STAGE

The transformer supply should be connected with the brown cable to the live (fused) terminal in the supply outlet and the blue cable to the neutral terminal. The transformer is double insulated and does not require an earth connection.

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

8.0 COMMISSIONING

8.1 INTRODUCTION

It is recommended that the commissioning of the plant is undertaken by a trained service engineer, who will be able to put the plant into service quickly, and most efficiently. However, if the services of an experienced engineer are not available, following the steps outlined below will result in the system being properly commissioned.

8.2 CONTROLLER SETTING - Site programming mode

All SXT controller settings will require the valve to have a mains supply switched on. The valve must not be regenerating when controller settings are adjusted.

8.2.1 Setting the Time of Day

For mechanical timer and metered valves, press and hold the red button on the front of the timer assembly. Turn the timer wheel until the actual time of day is opposite the time of day pointer. Release the red button .

On SXT timers the display alternates between the time of day, and the remaining calculated capacity in litres before regeneration. Wait until the time of day is displayed and the press the up and down arrow keys until the correct time of day is displayed.

8.2.2 Site programming - Setting the regen days or capacity and regeneration override.

On mechanical time clock valves, the days that a regeneration is required must be set using the skipper wheel. Rotate the skipper wheel until the number 1 is at the red pointer. Set the regeneration days by sliding the metal tabs on the skipper wheel outwards. Each tab represents 1 day.

For mechanical metered valves, the capacity (number of litres between regenerations) needs to be set using the capacity wheel. Firstly work out the capacity of the softener, based on local water hardness and volume of the resin tanks (see 13.2). The valve has a “delayed regeneration” which means that when capacity has been reached, it will wait until 2am before initiating a regeneration. Therefore, when the capacity figure is set on the valve, a reserve of 25% should be applied.

Pull out the central part of the meter wheel and rotate until the correct capacity is aligned against the white dot underneath. The capacity is now set.

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

The softener regeneration cycles have been factory programmed. The volume capacity of the resin in litres has also been set up based on a default hardness of 21 Degrees Clark (300ppm). This may need to be altered based on local water hardness (see section 13.2).

Digital SXT valves will require a capacity to be set (program step 3) See 13.3 for full programming details.

There is no regeneration override facility on the Mechanical Initiation valves.

On SXT valves, a regeneration override is used to freshen the resin if a regeneration has not taken place for a number of days.

Press and hold the press the up and down arrow keys together for 5 seconds. The volume capacity of the resin in litres will be displayed. This can be adjusted to suit site conditions by pressing the up and down arrows.

Press the extra cycle button to set the regeneration override. The default is 3 days. This may be changed to a different interval by pressing the up and down arrows.

Press the extra cycle button to exit the Site Programming mode.

8.3 BRINE SYSTEM

8.3.1 Brine Tank Filling

Place approximately 100 mm depth of water in the bottom of the brine tank. Fill with pellet salt (recommended) until the brine tank it is full or with granular salt until it is 3/4 full.

Overfilling the brine tank with granular salt can result in an overflow of brine. This cannot happen with pellet salt, which is why it is recommended.

Under no circumstances use cooking salt or Pure Vacuum Dried (PVD) salt to fill the brine tank as either of these will damage the resin and the internal components of the regeneration valve and brine draw system.

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

8.4 PRE-SERVICE FLUSH AND REGENERATION – MECHANICAL TIMERS

Set the manual isolating valves so that water will by-pass the softener. Turn on the main water supply. Open a soft water tap close by and let the water run for a few minutes to flush out any debris or foreign matter from the pipework system.

Turn on the power supply to the valve.

Remove the dust cover from the control valve and ensure that the meter cable is not plugged into the meter on outlet of the valve. Swing 'open' the timer assembly on the left of the valve by pulling on its right hand edge. When the piston is in the backwash position of the regeneration cycle (fully in) , turn off the power supply.

Turn on the power supply. The drive motor on the left of the timer will run and will start to drive the piston. This will take several minutes. Turn off the power supply.

Slowly open the water inlet valve. Air will be expelled from the drain line, followed by water once the vessels are filled with water. Open the inlet valve fully to allow water to run to drain for 4-5 minutes.

Turn on the power supply and index the regeneration knob to the 'brine' position - the microswitch is in the first (long) gap in the bank of pins. Water/brine will be drawn in from the brine tank, and water will trickle slowly down the drain line.

When the piston has stopped moving, index to the rapid rinse section - second bank of pins - and again wait for the piston to stop moving. Water will run quickly down the drain line.

Index the knob to the brine refill section - second (short) gap in the pins - and wait for the piston to stop moving. Water will be refilled into the brine tank.

Finally, index the knob to the 'home' position past the last pair of pins (inner microswitch drops into the indent in program wheel) and wait for the piston to stop moving.

'Close' the timer so that the support leg snaps into the backplate. Adjust the capacity of the softener if necessary using the reference sheet attached. The units used on the dial are cubic metres (m³). Replace the valve dust cover. Plug the meter cable back into the meter on the outlet of the valve

Open the outlet valve (if fitted) and test the water output from a downstream tap.

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

Fill the brine tank with tablet salt to 6" from the top or to 12" from the top if granular salt is used.

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

8.5 PRE-SERVICE FLUSH AND REGENERATION – SXT TIMERS

Set the manual isolating valves so that water will by-pass the softener. Turn on the main water supply. Open a soft water tap close by and let the water run for a few minutes to flush out any debris or foreign matter from the pipework system.

Turn on the power supply to the valve.

Press the extra cycle button for five seconds. The display will then indicate 1-----. Wait for the controller to advance the valve until a time in minutes appears on the right of the display.

Slowly open the mains inlet isolating valve until water starts to flow slowly from the drain line. Air will escape initially through the drain line. When water begins to flow steadily, open the valve fully.

Press the 'Extra Cycle' button four times more to return the valve to service. After each press, wait for a time to appear on the right of the display. There will be loud 'click' as the brine valve closes while the valve advances from position 4 to the home position.

Finally press the 'Extra Cycle' button to initiate a complete regeneration and refill the brine tank to the correct level. Do not advance any of the cycles.

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

9.0 OPERATION

9.1 NORMAL OPERATION

Operation is completely automatic, with regeneration being initiated whenever required by the meter controller.

9.2 REFILLING WITH SALT

Since salt is used in the regeneration process, the level of salt in the brine tank will fall after each regeneration. It should not be allowed to fall below 75 mm above the bottom of the cabinet. When the low level is approached (or more often, as a routine) the cabinet should be refilled to the top with pellet salt or 3/4 filled with granular salt.

The approximate capacity of the cabinet for salt is shown in Section 12.1.

9.3 MANUAL REGENERATION

There can be occasions during the life of equipment such as softeners when the original design basis is not applicable. For example, after a shutdown period, the demand for soft water may far exceed the design flow rate for a short period. Another possibility is that the Water Service Plc finds it necessary to change to a supply which is much harder than that normally received. It will then be necessary to give the unit an additional regeneration to ensure that soft water continues to be available to service.

This additional regeneration is initiated manually.

Remove the timer cover and index the program wheel knob approximately 6mm clockwise until a loud click is heard. Regeneration will proceed automatically immediately. It will be a few seconds until regeneration water starts to pass to drain.

9.4 BY-PASSING THE SOFTENER

There may be occasions when it is desirable to by-pass the softener, to allow hard water to go to service, or if the softener is for some reason not performing properly.

To do this, open the by-pass isolating valve and close the softener outlet isolating valve (see Installation Diagram, Fig 3 in Section 14.2). The softener can still be safely regenerated with the valves in this position. If for any reason, it is desired to completely isolate the softener, it will be necessary to close the inlet isolating valve as well.

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

9.5 TEMPORARY SHUT-DOWN

If the softener needs to be taken out of service for some time for any other reason, it is recommended that one or two simple procedures be undertaken to ensure the return to operation is as smooth as possible.

1. The unit should be left with both columns fully regenerated regenerated.
2. The electrical supply should be turned off
3. The inlet and outlet manual isolating valves should be closed.
4. The valve should be drained of water if there is the possibility of the system freezing.

On restart, it is recommended that the vessel is manually regenerated.

9.6 CHANGES IN INCOMING WATER

There is a much greater tendency these days for the Water supply Plc to use water from more than one source. It is unlikely that two sources will have similar chemical composition, and so when this happens the raw water being fed to the unit may also change. It is suggested that routine monitoring be undertaken to check whether this is the case (see 9.9). If variation greater than 5% is found, it will be necessary to check whether the settings for regeneration need changing. Resetting is the same as setting.

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

9.7 ROUTINE MONITORING

The following recommendations are made to help the user of the softener confirm that it is performing as required, and to give early warning of possible problems. The operation of the softener is completely automatic, and should not require adjustment (except as above).

Weekly

Check the treated water hardness with a hardness test kit.
Inspect the level of salt in the salt tank and refill if necessary.

Monthly

Check raw water hardness, and record. Compare with original hardness and adjust volume capacity setting if required (see Section 13.1).

Annually

Inspect and clean/replace as necessary the brine injector, piston and the internal seals. This should be performed by a competent engineer familiar with Fleck valves.

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

10.0 FAULT FINDING AND RECTIFICATION

Modern water softeners are extremely reliable and unlikely to give any problems if they are installed and operated correctly.

10.1 NO FLOW TO SERVICE

Check mains pressure is above 1.8 bar.

Check inlet and outlet isolating valves are open.

Check service outlet valve is open.

Check pressure drop across resin. If excessive, resin may be fouled, or internals blocked. Initiate a regeneration. If this does not free up the resin the softener will need to be inspected and serviced by a competent engineer.

10.2 POOR TREATED WATER QUALITY

Check manual by-pass closed.

Check blending valve (if fitted) has not been opened or adjusted.

Check salt level in brine tank. Refill if necessary.

Trickle flow through conventional ball valve in storage tank. Replace with Torbeck, Fluidmaster or Aylesbury servo valve.

Check raw water pressure above minimum. If flow is less than minimum, channelling of water can occur in resin which results in inadequate treatment.

Check injector strainer and injector not blocked (see Appendix for drawings). Clean if necessary.

Check brine pick-up screen not blocked. Clean if necessary.

Check brine line not split. Replace if necessary.

Check raw water hardness, and then check if controller setting is correct for this hardness (see Section 8)

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

10.3 NO REGENERATION

Check electrical supply, fuses etc. satisfactory.

Check control head motor runs, by initiating a manual regeneration.
Replace if necessary.

10.4 UNSATISFACTORY CAPACITY BETWEEN REGENERATIONS

See Section 10.2.

Check condition of resin. Resin may have become fouled, inhibiting the regeneration process. If fouled, it should be cleaned or replaced.

Check incoming water for presence of Chlorine. If Chlorine level too high, the resin may have been degraded.

Check raw water pressure. Too high pressure may mean the brine draw stage of regeneration is not effective

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

11.0 WARRANTY AND SERVICE

11.1 AFTER SALE WARRANTY

Your softener is covered by a parts warranty for a period of one year from installation.

Should you have any problems with your softener or require routine service, please contact your supplier.

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

12.1 PROCESS AND OPERATING DATA

12.1.1 2510 Series Water Softeners 20-120 litre

MODEL		20 L	25 L	30 L	40 L	50 L	60L	75L	100L	120L
PARAMETER	UNITS									
Max. Service Flow	M3/hr	0.80	1.00	1.20	1.60	2.00	2.40	3.00	4.00	4.30
Min Service Flow	M3/hr	0.10	0.12	0.15	0.20	0.25	0.30	0.37	0.50	0.60
Capacity	m3	1.0	1.25	1.50	2.0	2.5	3.0	3.75	5.0	6.0
Volume treated between regens (300 ppm CaCO ₃ , 21° Clarke)	M3	3.3	4.2	5.0	6.7	8.4	10.0	12.5	16.7	20.0
Salt used per regeneration	kg	2.8	3.5	4.2	5.6	7.0	8.4	10.5	14.0	16.8
Regeneration Time	mins	48	48	68	72	72	72	72	96	96
Resin Volume	litres	20	25	30	40	50	60	75	100	120
Salt Storage Capacity	kg	80	80	80	120	120	160	160	250	250
No of Regens Salt stored	-	28	22	19	35	17	19	15	17	14
Maximum Flow to drain	Lit/min	4.4	5.5	8.8	8.8	8.8	12.95	14.8	18.5	18.5

IMPORTANT NOTES

Much of the data quoted in the above table is affected by the inlet pressure, and so should be regarded as nominal only.

Total flow to drain will be similarly affected and is therefore not quoted, but will be about 6 times the resin volume.

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

12.1 PROCESS AND OPERATING DATA

12.1.1 2750 Series Water Softeners 50-350 litre

MODEL		50 L	60L	75L	120L	140L	250L	350L
PARAMETER	UNITS							
Max. Service Flow	M3/hr	2.00	2.40	3.10	4.80	5.60	5.90	5.90
Min Service Flow	M3/hr	0.25	0.30	0.37	0.60	0.70	1.20	1.75
Capacity	m3	2.5	3.0	3.75	6.0	7.00	12.5	17.5
Volume treated between regens (300 ppm CaCO ₃ , 21° Clarke)	M3	8.3	10.0	12.5	20.0	23.3	41.75	58.45
Salt used per regeneration	kg	7.0	8.4	10.5	16.8	19.6	35.0	49.0
Regeneration Time	mins	72	72	72	96	96	120	140
Resin Volume	litres	50	60	75	120	140	250	350
Salt Storage Capacity	kg	120	160	160	250	350	500	750
No of Regens Salt stored	-	17	19	15	14	20	14	15
Maximum Flow to drain	Lit/min	8.8	12.9	14.9	18.5	25.9	37.0	55.5

IMPORTANT NOTES

Much of the data quoted in the above table is affected by the inlet pressure, and so should be regarded as nominal only.

Total flow to drain will be similarly affected and is therefore not quoted, but will be about 6 times the resin volume.

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

12.1 PROCESS AND OPERATING DATA

12.1.1 2850 Series Water Softeners 100-500 litre

MODEL		100L	120L	140	250L	350L	500L
PARAMETER	UNITS						
Max. Service Flow	M3/hr	4.00	4.80	5.60	10.0	11.6	11.6
Min Service Flow	M3/hr	0.50	0.60	0.75	1.25	1.75	2.5
Capacity	m3	5.0	6.0	7.00	12.5	17.5	25.0
Volume treated between regens (300 ppm CaCO ₃ , 21° Clarke)	M3	16.7	20.0	23.3	41.75	58.45	83.5
Salt used per regeneration	kg	14.0	16.8	19.6	35.0	49.0	70.0
Regeneration Time	mins	96	96	96	120	140	140
Resin Volume	litres	100	120	140	250	350	500
Salt Storage Capacity	kg	250	250	350	500	750	1000
No of Regens Salt stored	-	17	14	20	14	15	14
Maximum Flow to drain	Lit/min	18.5	18.5	25.9	37.0	55.5	129.0

IMPORTANT NOTES

Much of the data quoted in the above table is affected by the inlet pressure, and so should be regarded as nominal only.

Total flow to drain will be similarly affected and is therefore not quoted, but will be about 6 times the resin volume.

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

12.2 ENGINEERING DATA

12.2.1 2510 Series Water Softeners 20-120 lit

MODEL		20L	25L	30L	40L	50L	60L	75L	100L	120L
PARAMETER	UNITS									
Diameter of vessel	mm	203	229	254	254	254	315	305	356	356
Height to top of valve	mm	1100	1100	1100	1330	1590	1430	1590	1984	1984
Diameter of brine tank	mm	285	285	285	430	430	460	560	560	560
Height of brine tank	mm	960	960	960	960	960	835	1000	1180	1180
Inlet Conn.BSPF	ins	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0
Outlet Conn.BSPF	ins	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0
Drain Conn.	ins	1/2	1/2	1/2	1/2	1/2	1/2	1/2	1/2	1/2
Brine Tank Overflow Conn.	ins	3/4	3/4	3/4	3/4	3/4	3/4	3/4	3/4	3/4
Delivered Wt.	Kg.	35	40	45	50	58	68	85	115	130
Working Wt. (approx)	Kg	150	160	190	205	225	300	350	600	700
Electrical power	v	240	240	240	240	240	240	240	240	240
	Hz	50	50	50	50	50	50	50	50	50
	V/A	75	75	75	75	75	75	75	75	75

MAXIMUM OPERATING PRESSURE 5.5 Bar
MINIMUM OPERATING PRESSURE 1.7 Bar
MAXIMUM OPERATING TEMPERATURE 50.0C
HEADROOM - Allow 100 mm greater than overall height.

NB Vessels can vary depending on manufacturer used, dimensions are therefore nominal.

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

12.2 ENGINEERING DATA

12.2.1 2750 Series Water Softeners 50-350 lit

MODEL		50L	60L	80L	120L	140L	250L	350L
PARAMETER	UNITS							
Diameter of vessel	mm	254	315	330	355	406	533	609
Height to top of valve	mm	1590	1430	1590	1984	1988	2038	2225
Diameter of brine tank	mm	430	457	475	560	650	830	970
Height of brine tank	mm	960	1016	1016	1180	1240	1200	1240
Inlet Conn.BSPF	ins	1.0	1.0	1.0	1.0	1.0	1.0	1.0
Outlet Conn.BSPF	ins	1.0	1.0	1.0	1.0	1.0	1.0	1.0
Drain Conn.	ins	1/2	1/2	1/2	1/2	1/2	3/4	3/4
Brine Tank Overflow Conn.	ins	3/4	3/4	3/4	3/4	3/4	3/4	3/4
Delivered Wt.	Kg.	65	75	100	150	170	280	380
Working Wt. (approx)	Kg	225	300	350	700	750	1100	1250
Electrical power	v	240	240	240	240	240	240	240
	Hz	50	50	50	50	50	50	50
	V/A	75	75	75	75	75	75	75

MAXIMUM OPERATING PRESSURE 5.5 Bar MINIMUM OPERATING PRESSURE 1.7 Bar
 MAXIMUM OPERATING TEMPERATURE 50.0C
 HEADROOM - Allow 100 mm greater than overall height.

NB Vessels can vary depending on manufacturer used, dimensions are therefore nominal.

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

12.2 ENGINEERING DATA

12.2.1 2850 Series Water Softeners 100-500 lit

MODEL		100L	120L	140L	250L	350L	500L
PARAMETER	UNITS						
Diameter of vessel	mm	355	355	406	533	609	762
Height to top of valve	mm	1984	1984	1988	2038	2225	2450
Diameter of brine tank	mm	560	560	650	830	970	1050
Height of brine tank	mm	1180	1180	1240	1200	1240	1500
Inlet Conn.BSPF	ins	1.5	1.5	1.5	1.5	1.5	1.5
Outlet Conn.BSPF	ins	1.5	1.5	1.5	1.5	1.5	1.5
Drain Conn.	ins	1.0	1.0	1.0	1.0	1.0	1.0
Brine Tank Overflow Conn.	ins	3/4	3/4	3/4	3/4	3/4	3/4
Delivered Wt.	Kg.	135	150	170	280	380	500
Working Wt. (approx)	Kg	350	700	750	1100	1250	1800
Electrical power	v	240	240	240	240	240	240
	Hz	50	50	50	50	50	50
	V/A	75	75	75	75	75	75

MAXIMUM OPERATING PRESSURE 5.5 Bar MINIMUM OPERATING PRESSURE 1.7 Bar
 MAXIMUM OPERATING TEMPERATURE 50.0C
 HEADROOM - Allow 200 mm greater than overall height.

NB Vessels can vary depending on manufacturer used, dimensions are therefore nominal.

2510/2750/2850 Series

13.0 Factory Programming

13.1 Regeneration Settings

2510 valves

Softener Lit	Tank	B/wash lpm	Injector Std	BLFC	Slow rinse lpm	B/wash time	BSR time	Fast Rinse time	Brine refill time	Regen time
20	835	4.54	1	0.25	1.52	4	40	4	8	48
25	935	5.68	1	0.25	1.52	4	40	4	10	48
30	1035	9.08	1	0.25	1.52	4	60	4	12	64
40	1044	9.08	1	0.25	1.52	6	60	6	16	72
50	1054	9.08	1	0.5	1.52	6	60	6	10	72
60	1248	13.25	2	0.5	3.03	6	60	6	12	72
75	1354	15.14	2	0.5	3.03	6	60	6	16	72
100	1465	18.93	2	1	3.03	8	80	8	10	96
120	1465	18.93	2	1	3.03	8	80	8	12	96

2750 valves

Softener Lit	Tank	B/wash lpm	Injector Std	BLFC	Slow Rinse lpm	B/wash time	BSR time	Fast rinse	Brine refill time	Regen time
50	1054	9.08	1	0.5	1.51	6	60	6	10	72
60	1248	13.25	2	0.5	3.03	6	60	6	12	72
80	1354	15.14	2	0.51	3.03	6	60	6	18	72
120	1465	18.93	2	1	3.03	8	80	8	12	96
140	1665	26.50	3	1	4.16	8	80	8	14	96
250	2162	37.85	C4	2	8.71	10	100	10	14	120
350	2472	56.78	C4	2	8.71	10	120	10	18	140

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

2850 valves

Softener Lit	Tank	B/wash lpm	Injector Std	BLFC	Slow Rinse lpm	B/wash time	BSR time	Fast rinse	Brine refill time	Regen time
50	1054	9.08	1	0.5	1.51	6	60	6	10	72
60	1248	13.25	2	0.5	3.03	6	60	6	12	72
80	1354	15.14	2	0.51	3.03	6	60	6	18	72
120	1465	18.93	2	1	3.03	8	80	8	12	96
140	1665	26.50	3	1	4.16	8	80	8	14	96
250	2162	37.85	C4	2	8.71	10	100	10	14	120
350	2472	56.78	C4	2	8.71	10	120	10	18	140

2510/2750/2850 Series

13.2 Softener output (capacity) at differing hardness levels

Outputs detailed in cubic meters (1000 Litres per cubic meter)

Hardness in ppm

Res vol Lit	Max cont flow m3/h	Max cont flow lpm	Output m3pp m	@100 ppm Deg Cl 7	@150 ppm Deg Cl 10.5	@200 ppm Deg Cl 14	@250 ppm Deg Cl 17.5	@300 ppm Deg Cl 21	@350 ppm Deg Cl 25	@400 ppm Deg Cl 28	Salt kg (Nom)
20	0.80	13.33	1000	10.00	6.67	5.00	4.00	3.33	2.86	2.50	2.80
25	1.00	16.67	1250	12.50	8.33	6.25	5.00	4.17	3.57	3.13	3.50
30	1.20	20.00	1500	15.00	10.00	7.50	6.00	5.00	4.29	3.75	4.20
40	1.60	26.67	2000	20.00	13.33	10.00	8.00	6.67	5.71	5.00	5.60
50	2.00	33.33	2500	25.00	16.67	12.50	10.00	8.33	7.14	6.25	7.00
60	2.40	40.00	3000	30.00	20.00	15.00	12.00	10.00	8.57	7.50	8.40
75	3.00	50.00	3750	37.50	25.00	18.75	15.00	12.50	10.71	9.38	10.50
80	3.20	53.33	4000	40.00	26.67	20.00	16.00	13.33	11.43	10.00	11.20
100	4.00	66.67	5000	50.00	33.33	25.00	20.00	16.67	14.29	12.50	14.00
120	4.80	80.00	6000	60.00	40.00	30.00	24.00	20.00	17.14	15.00	16.80
140	5.60	93.33	7000	70.00	46.67	35.00	28.00	23.33	20.00	17.50	19.60
150	6.00	100.00	7500	75.00	50.00	37.50	30.00	25.00	21.43	18.75	21.00
190	7.60	126.67	9500	95.00	63.33	47.50	38.00	31.67	27.14	23.75	26.60
200	8.00	133.33	10000	100.00	66.67	50.00	40.00	33.33	28.57	25.00	28.00
250	10.00	166.67	12500	125.00	83.33	62.50	50.00	41.67	35.71	31.25	35.00
300	12.00	200.00	15000	150.00	100.00	75.00	60.00	50.00	42.86	37.50	42.00
350	14.00	233.33	17500	175.00	116.67	87.50	70.00	58.33	50.00	43.75	49.00
500	20.00	333.33	25000	250.00	167.50	125.00	100.00	83.50	71.50	62.50	160.00

The factory default setting is the capacity at 300 ppm.

The maximum flow rate of larger systems is determined by the control valve.

2510 1" valves are limited to 4.3 m3/h

2750 1" valves are limited to 5.9 m3/h

2850 1.1/2" valves are limited to 11.60m3/h

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

13.3 Master Program Settings – SXT valves only

Master Program set up summary –2510 valve

To enter programming, set time of day to 12:01 then push and hold the up and down buttons together for 5 seconds.

Parameter description	Disp	Value	Res Vol	20	25	30	40	50	60	75	100	120
Display Format	DF	Ltr										
Valve Type	VT	dF1b										
Control Type	CT	Fd										
Number of Tanks	NT	1										
Unit capacity	C	see across	⇒	100	125	150	200	250	300	375	500	600
Feedwater Hardness	H	30										
Reserve Selection	RS	SF										
Safety Factor	SF	30										
Day Override	DO	7										
Regeneration Time	RT	2:00										
BackWash	BW	see across	⇒	4	4	4	6	6	6	6	8	8
Brine Draw/Slow Rinse	BD	see across	⇒	40	40	60	60	60	60	60	80	80
Fast Rinse	RR	see across	⇒	4	4	4	6	6	6	6	8	8
Brine Refill *	BF	see across	⇒	8	10	12	16	10	12	16	10	12
Flow meter type	FM	see across	⇒	P0.7	P0.7	P0.7	P0.7	P0.7	P0.7	P0.7	P0.7	P1
Exit to time of day												

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

13.4 Master Program Settings – SXT valves only

Master Program set up summary –2750 valve

To enter programming, set time of day to 12:01 then push and hold the up and down buttons together for 5 seconds

Parameter description	Disp	Value	Res Vol	50	60	80	120	140	250	350
Display Format	DF	Ltr								
Valve Type	VT	dF1b								
Control Type	CT	Fd								
Number of Tanks	NT	1								
Unit capacity	C	see across	⇒	250	300	400	600	700	1300	1800
Feedwater Hardness	H	30								
Reserve Selection	RS	SF								
Safety Factor	SF	30								
Day Override	DO	7								
Regeneration Time	RT	2:00								
BackWash	BW	see across	⇒	6	6	6	8	8	10	10
Brine Draw/Slow Rinse	BD	see across	⇒	60	60	60	80	80	100	120
Fast Rinse	RR	see across	⇒	6	6	6	8	8	10	10
Brine Refill *	BF	see across	⇒	10	12	18	12	14	14	18
Flow meter type	FM	P1.0								
Exit to time of day										

2510/2750/2850 Watersoftener

Installation Operation Maintenance Manual

13.4 Master Program Settings – SXT valves only

Master Program set up summary – 2850 valve

To enter programming, set time of day to 12:01 then push and hold the up and down buttons together for 5 seconds

Parameter description	Disp	Value	Res Vol	50	60	80	120	140	250	350
Display Format	DF	Ltr								
Valve Type	VT	dF1b								
Control Type	CT	Fd								
Number of Tanks	NT	1								
Unit capacity	C	see across	⇒	250	300	400	600	700	1300	1800
Feedwater Hardness	H	30								
Reserve Selection	RS	SF								
Safety Factor	SF	30								
Day Override	DO	7								
Regeneration Time	RT	2:00								
BackWash	BW	see across	⇒	6	6	6	8	8	10	10
Brine Draw/Slow Rinse	BD	see across	⇒	60	60	60	80	80	100	120
Fast Rinse	RR	see across	⇒	6	6	6	8	8	10	10
Brine Refill *	BF	see across	⇒	10	12	18	12	14	14	18
Flow meter type	FM	P1.0								
Exit to time of day										

2510/2750/2850 Series

Manufacturer's Declaration of Conformity

We the undersigned

EURAQUA UK, HITCHIN, ENGLAND

Certify that the product

*type: SIMPLEX WATER SOFTENER WITH FLECK 2510/2750/2850
24 VOLT AC VALVE*


*has been designed and manufactured in accordance with the
specifications of the following:*

Directive

Machinery Directive 89/392/EEC
Low Voltage Directive 73/23/EEC
EMC-Directive 89/336/EEC

Standard

EN 292-1, EN 292-2
EN 60 335-1
EN 55 014

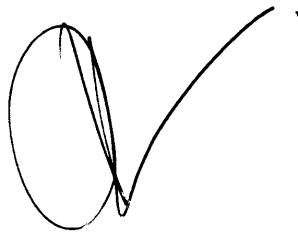

RT Adam
Director

Hitchin, England 01/01/05
Issue place & date